



# Aufbauanleitung 309832/LH

Assembly instructions / Instructions de montage / Montagehandleiding

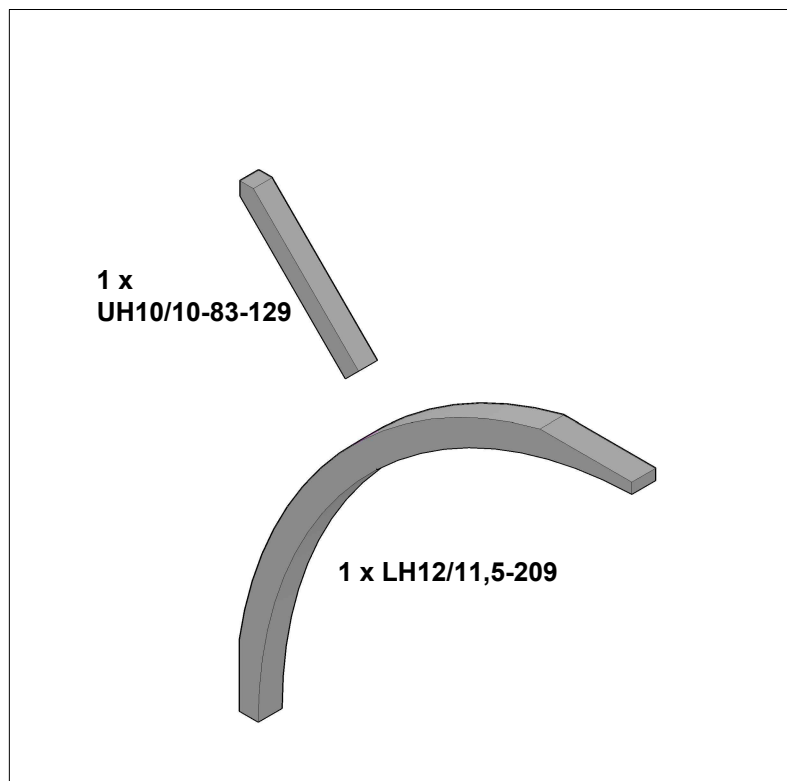


2 x C110-020		200mm, M10
1 x C110-022		220mm, M10
1 x C110-024		240mm, M10
4 x A110-39		M10
4 x C110-M10		M10
2 x C105-212		212cm
2 x C105-132		132cm

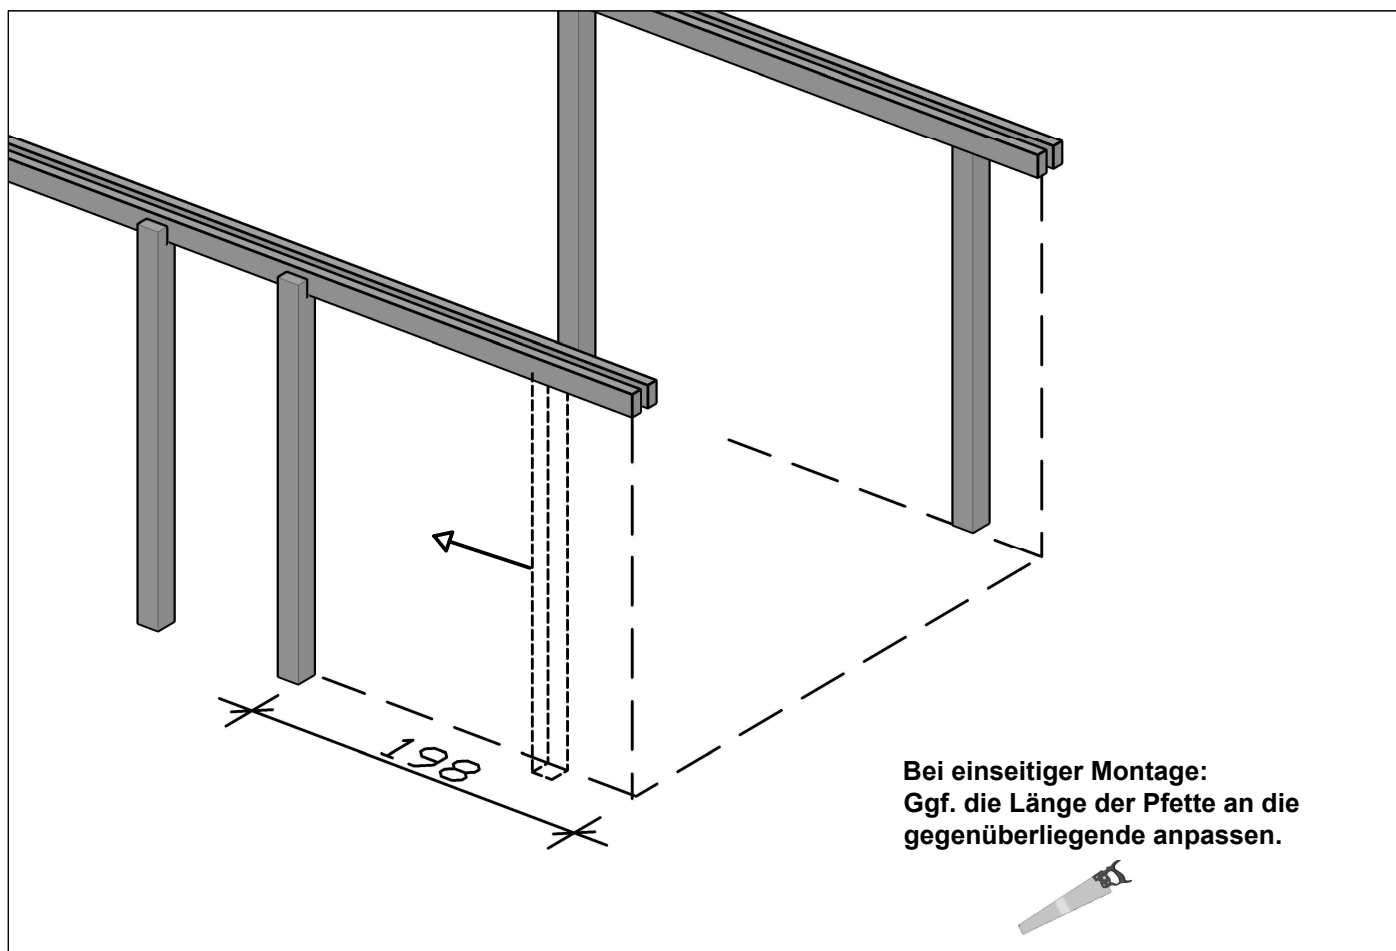

# Aufbauanleitung 309832/LH

Assembly instructions / Instructions de montage / Montagehandleiding

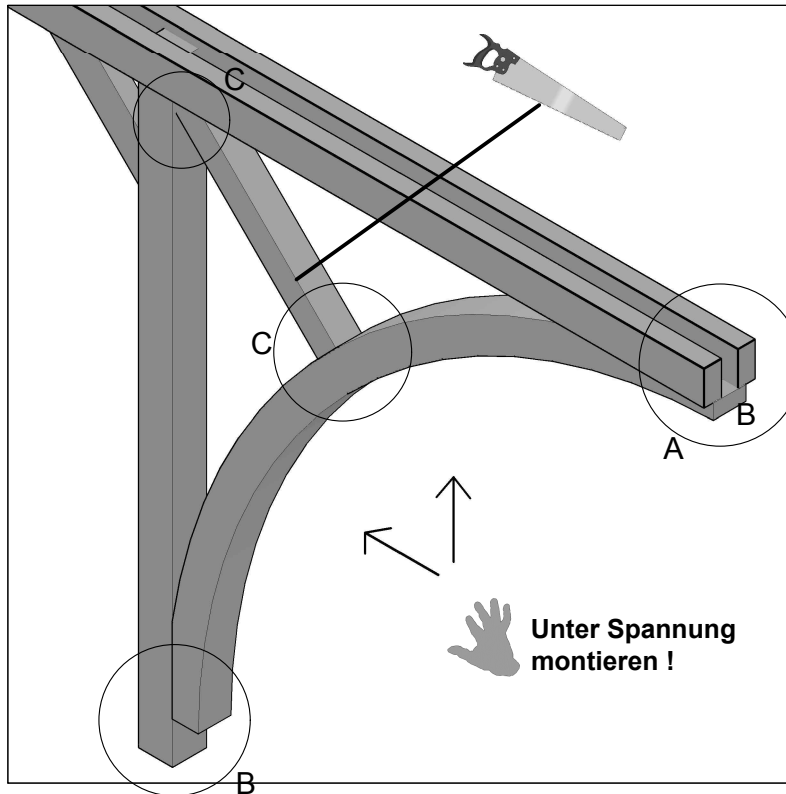

<p><b>A</b></p>	<p><b>2x C110-020, 200mm</b> </p> <p><b>2x A110-39</b> </p> <p><b>2x C110-M10</b> </p>	<p>9mm</p>
-----------------	--	------------

<p><b>B</b></p>	<p><b>für 12er Pfosten:</b></p> <p><b>1 x C110-024, 240mm</b> </p> <p><b>1 x C110-022, 220mm</b> </p> <p><b>2 x A110-39</b> </p> <p><b>2 x C110-M10</b> </p>	<p>10mm</p>
-----------------	--	-------------

<p><b>C</b></p>	<p><b>2 x C105-132, 132mm</b> </p> <p>8mm</p>		<p><b>2 x C105-212, 212mm</b> </p> <p>8mm</p>
-----------------	---	--	---